



Diversey™



suma®

Degreaser Pur-Eco



D3.9

## Powerful degreaser

### Description

Suma Degreaser Pur-Eco D3.9 is a concentrated liquid degreaser for cleaning heavily soiled surfaces in the kitchen.

 
### Key properties

Suma Degreaser Eco-Pur D3.9 is an alkaline liquid detergent for manual cleaning of all types of heavily soiled surfaces in the kitchen, including surfaces, cooker hoods, fryers, hobs, tables, floors etc. Its formulation contains a powerful surfactant for improved wetting of the surface, and alkali that can effectively remove all types of grease and encrusted food contamination.

Suma Degreaser Pur-Eco D3.9 can also be used in pure form for the daily cleaning of ovens.

### Benefits

- Powerful formula that attacks heavy grease and leaves surfaces clean and shiny
- Dissolves dirt and keeps it in suspension, preventing re-deposition
- Suitable for low pressure spray systems
- Environmentally friendly: meets the standards of the EU Ecolabel





Diversey™



suma®

Degreaser Pur-Eco



D3.9

## Powerful degreaser

### Use instructions

#### Dosage

The recommended concentration varies between 20 and 30 ml/L of warm water depending on the degree of soiling and the application.

#### Application

##### General cleaning method

1. Apply the solution (20-30 ml/L) on the surface with a cloth, sponge or a low-pressure spray system.
2. Clean with a cloth or brush.
3. Rinse with clean water and let dry.

##### Immersion cleaning

1. Soak in a solution of product diluted 10-20 ml/L of warm water.
2. Rub or brush to remove stubborn stains.
3. Rinse with clean water and let dry.

##### Cleaning fryers

1. Drain the fryer and close the valve.
2. Fill with 1 L of water up to the filling level for the oil.
3. Add 1 L Suma Degreaser Pur-Eco D3.9 to 10 L of water (10%). Check the capacity of the tank to determine the correct dilution.
4. Turn on the fryer and boil in a controlled manner for 1 hour.
5. Allow to cool and drain. Rub or brush to remove stubborn dirt on the side walls and heating elements.
6. Rinse 2 times with warm clean water and let dry.

##### Cleaning ovens

1. Apply undiluted with a sponge on the surfaces of the oven (<70°C).
2. Leave on for 15 minutes.
3. Clean surfaces by rubbing with sponge or cloth.
4. Rinse with clean water and let dry.



Diversey™



suma®

Degreaser Pur-Eco



D3.9

## Powerful degreaser

### Technical Data

Appearance	Clear slight yellow liquid
pH (neat)	>12.5
Relative density	1.04

*The above data is typical of normal production and should not be taken as a specification.*

Product	Pack Size	Article Code
Suma Degreaser Pur-Eco D3.9	6 x 2L	7515248

### Safety Handling and Storage Information

Please store in original container away from extremes of temperatures in a cool and dry place.

Full guidance on the handling and disposal of this product is provided in a separate Safety Data sheet.

### Product compatibility

Subject to the conditions of use, Suma Degreaser Pur-Eco D3.9 is suitable for all material commonly encountered in the kitchen, with the exception of aluminium, copper and brass.

Suma Degreaser Pur-Eco D3.9 meets all the criteria of the EU Ecolabel.